


# Installation Instructions

## Ignition Module Adapter Bracket



Assemble the Ignition Module to the adapter bracket using the included hardware.

- 2 - Star washers
- 2 - 10-24 screws

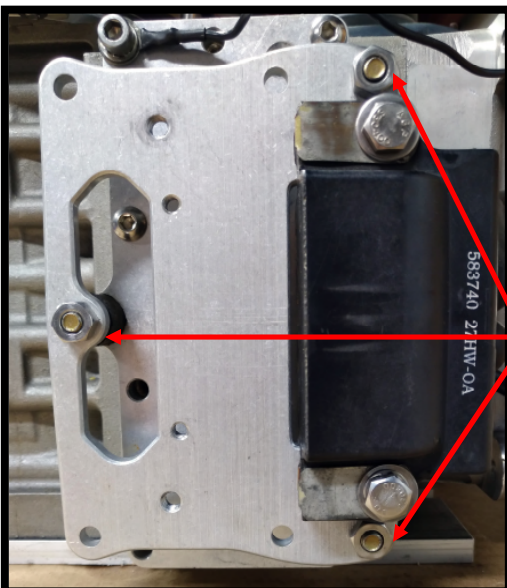

Disconnect the spark plug wires from the plugs.

Remove the two screws on the old power pack.

Remove the 3 nuts holding the ignition plate and remove from motor, note the wire routing when removing.

Disconnect the electrical connections and remove the old power pack. Do not reuse the old power pack 1/4-20 screws.




Using the same wire routing as before, connect the **Blue** primary lead to the **Top** coil post and connect the **Green** primary lead to the **Bottom** coil post. *See picture below.*

Insert the supplied 1/4-20 mounting screw through the ground leads, install the star washer as shown in the *picture below*.

Mount the ignition module bracket assembly to the ignition plate and re install the ignition plate assembly using 3 nuts.

Reconnect the remaining electrical connections and tighten the two 1/4-20 bracket mounting screws.

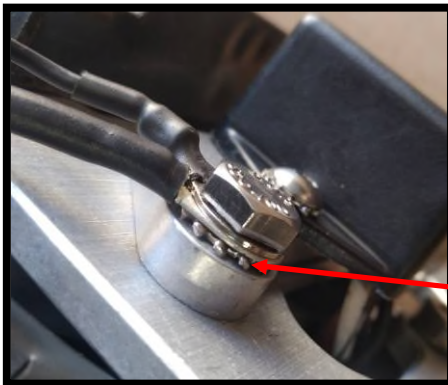

The star washer must be installed as shown.



Blue primary lead top post - Cylinder 1

Green primary lead bottom post - Cylinder 2